

# Hinged and panel fly screen assembly instructions

Each fly screen kit contains the following items which will build 1 complete fly screen



4 corner pieces




Mesh insertion tool



2 lift off hinges



Screws for hinges and turn buttons

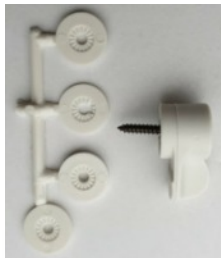

2 - 4 turn buttons depending on screen size.  
These come complete with mounting screw  
and spacers which can be used to accommodate  
installation on uneven surfaces



Fly mesh



Rubber beading



4 sections of Aluminium framing cut to size

## Hinged and panel fly screen assembly instructions



1. The frame will come pre cut to your ordered sizes.



2. Assemble the frame by pushing the corner pieces into the frame, you may need to tap these in using a hammer.



3. Lay the assembled frame on a flat surface with the inner groove facing you. Place the mesh over the panel and start to push the rubber gasket into the groove using the tool supplied. Trim off any excess mesh with a sharp Stanley knife.



4. Using the supplied screws, secure the hinges to the screen frame.



5. Once the screen has been hung in position secure the turn buttons in place to hold the fly screen panel closed.

